

FITTING INSTRUCTIONS

WRAP-AROUND AWNINGS



1 SET UP CAMPER

Set up your Ultimate camper-trailer in the usual manner.

2 FIT TRANSITION PIECE

If this is the first time the awnings are to be fitted, and the camper hasn't already been fitted with the galley awning **Transition Piece**, this item will need to be installed as follows:

- Place a step ladder alongside the Passenger Side (PS) of the camper;
- Step up the ladder - undo the Velcro tabs joining the **Safari Top** canvas to the **Canvas Top** roof;
- Align the **Transition Piece** as shown in *Fig. 1* - fasten in place to the **Canvas Top** using the Velcro edging;
- Reattach the **Safari Top**;
- Insert the Velcro tabs through the slots in the **Transition Piece** and reattach to **Safari Top**.

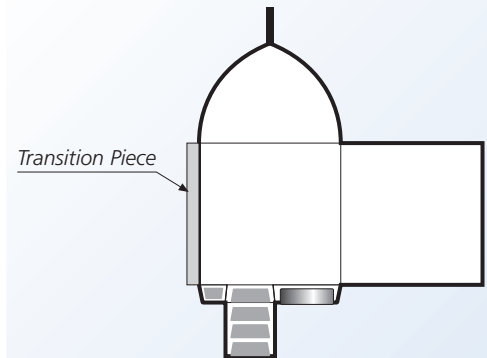


Figure 1

3 LAY OUT AWNINGS

- Lay ground cover alongside back of camper (to keep feet clean and provide a clean place to lay down the awnings);
- Close back door of camper - raise stairs to travel position;
- Lay out the awning items as shown in *Fig. 2*:
- Long Rear Awning**: lay along *back* of camper with zip edging towards camper - zip slider facing up and positioned to start from *PS rear* corner of camper;
- Galley Awning**: lay along *PS* of camper with zip edging towards camper - zip slider facing up and positioned to start from *PS rear* of camper;
- Triangular Awning**: in-between the other two awnings - Velcro facing up - corner eyelets aligned with the corresponding eyelets in the **Galley** and **Long Rear Awnings**.

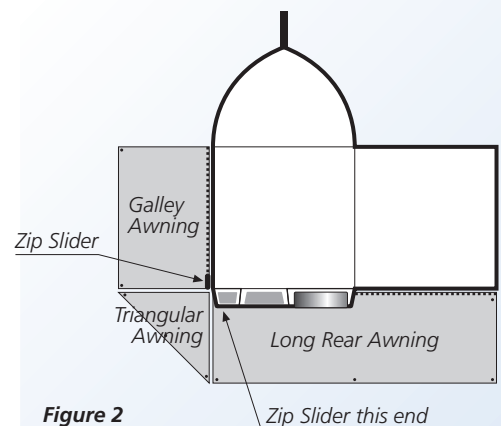


Figure 2

4 LAY OUT POLES, PEGS & ROPES

- Arrange unextended poles and pegs as shown in *Fig. 3*;
- Place guy-ropes alongside poles - double guy-ropes placed at each of the two end poles - note extra pegs!
- Poke the pegs through the loops of the guy-rope springs;
- Drive all the pegs into the ground at the end of each unextended pole as shown.


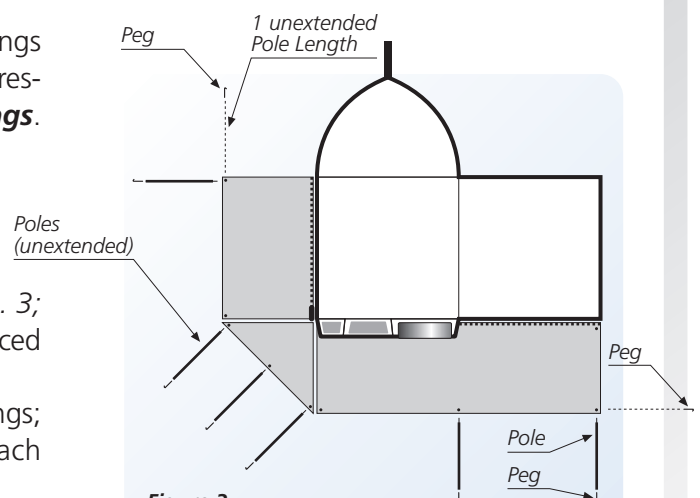


Figure 3





5 ATTACH 'GALLEY AWNING'

- Lower camper stairs - open back door;
- Pick up the rear corner of the **Galley Awning** (zip slider end) - walk up the camper stairs and stand on the rear bumper *stand point* - refer to Fig.4;
- Connect zip slider to the zip on the underside of the **Canvas Top** - push the zip slider away from you as far as you can safely reach - descend camper stairs;
- Take the lanyard rope in your left hand - pick up the loose end of the **Galley Awning** in your right hand;
- Lift the **Galley Awning** as high as you can comfortably reach - pull on the lanyard rope to pull the zip slider closed a little more;
- Position the step ladder alongside the Gas Locker of the camper - ascend step ladder;
- Continue pulling the zip slider closed along its full length (Ref. Figure 5) - descend step ladder .

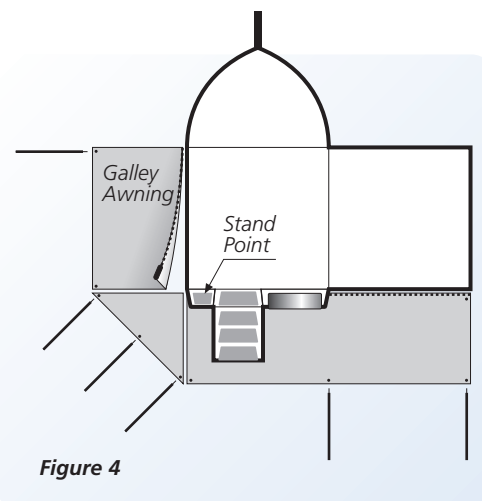

6 ATTACH 'LONG REAR AWNING'


- Drag the **Long Rear Awning** slightly away from the camper;
- Pick up the *forward PS* corner of the **Long Rear Awning** (zip slider end) - walk up the camper stairs and stand on the rear bumper *stand point* (ref. Fig. 5);
- Connect zip slider to the zip on the underside of the **Canvas Top** - pull zip slider towards you by about 500mm - descend camper stairs (ref. Fig. 6);
- Take lanyard rope (attached to zip slider) with your right hand - pick up the loose end of the **Long Rear Awning** with your left hand;
- Lift the **Long Rear Awning** as high as you can comfortably reach with your left hand - pull the lanyard rope to fasten the zip closed along its full length;
- Position the step ladder near to the Driver's Side (DS) *rear corner* of the camper (i.e. outer corner of inverted lid);
- Ascend step ladder - connect the DS and centre toggles through the 2 corresponding eyelets on the **Canvas Top** to relieve strain on zip - descend step ladder.

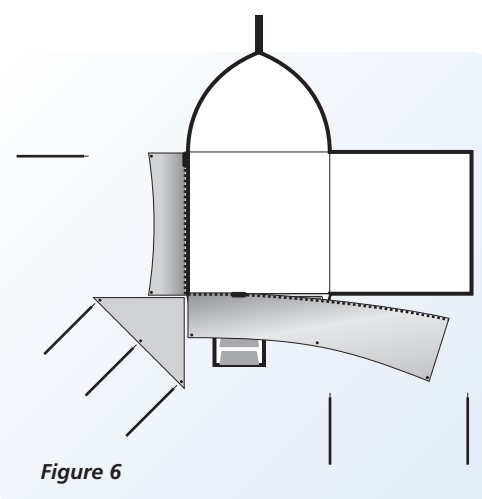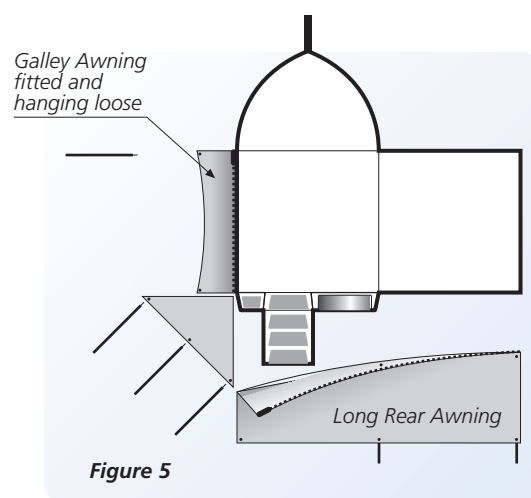




7 ATTACH 'TRIANGLE AWNING'

- Poke the pointy end of a pole through eyelet '1' of the **Triangular Awning** - then also through the corresponding eyelet '2' in the **Long Rear Awning** (Fig. 7);
- Place the loop end of the guy-rope over the point of the pole - lightly tension the guy-rope to support the unextended pole at a 45° angle to the ground;
- Repeat instructions 'a' and 'b' for eyelets '3' and '4' in the opposite corner of the **Triangular Awning** and the corresponding eyelet in the **Galley Awning**;
- Pick up the right-angled corner of the **Triangular Awning** - ascend the camper stairs;
- Align and join Velcro edging of **Triangular Awning** with those of the other 2 awnings - descend camper stairs.

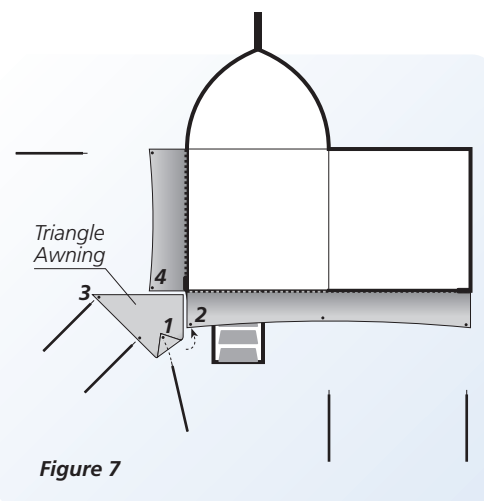

8 ATTACH POLES & ROPES

- Move to the *rear DS* of camper - place pointy end of pole through eyelet '5' in the **Long Rear Awning** (Fig. 8)
- Place loop of double guy-rope over this point - lightly tension the guy-ropes to support the pole at a 45° angle to the ground;
- Move to the *forward PS* of camper and repeat this process with eyelet '6' on the **Galley Awning**;
- Continue this process for the remaining poles and eyelets.

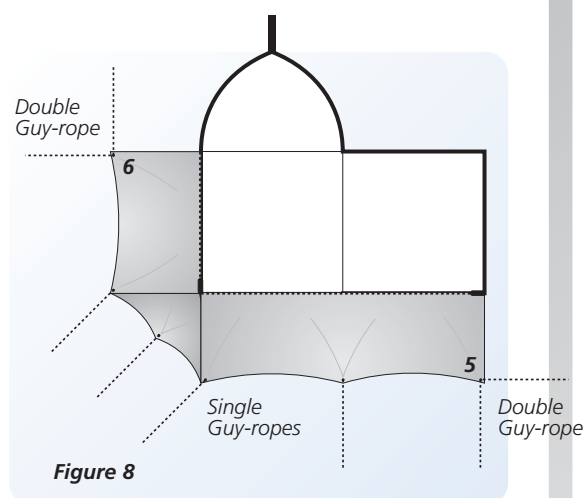

9 TENSION ROPES

- Starting with the middle pole on the **Triangular Awning**, extend the pole to approximately 2m in height - lightly retension the guy-rope;
- Repeat this process by working along rear of camper and then forwards to front of camper;
- Square up the poles to the ground and tension up the guy-ropes in the order shown in Fig. 9;
- Adjust heights of poles to level out awnings as necessary.

10 SET DOWN

- Slacken off guy-ropes;
- Lower heights of poles and remove;
- Remove guy-ropes and tent pegs;
- Reverse process of attaching awnings as described;
- Fold canvas along existing fold lines - pack away.

11 HELP: Ultimate Campers > (02) 4474-4410

